

Flexible x4 PCI Express to 4 MiniPCI Splitter

Hardware Manual

September 10, 2011

Revision 0.1

Contents

1	About this Document	1
1.1	Purpose	1
1.2	Feedback	1
1.3	Revision History	1
2	General Description	2
2.1	Introduction	2
3	Requirements/Features	5
3.1	Power Source	5
3.2	Software	5
4	Hardware Description	6
4.1	Board Layout	6
4.2	LEDs	8
4.3	Connectors	9
5	Installation	10
5.1	Hardware	10
5.2	Software	10
6	Operation Modes	11
7	Ordering Information	12
7.1	Standard package	12
8	Appendix A: Limited warranty	13

Figures

Figure 1: x4 PCI Express Host board (top side)	3
Figure 2: x4 PCI Express Host board (back side).....	3
Figure 3: MiniPCI Adapter board.....	4
Figure 4: x4 PCI Express Host board layout (top side)	6
Figure 5: MiniPCI Adapter board.....	7

Tables

Table 1: LEDs on the x4 PCI Express Host board.....	8
Table 2: LEDs on the MiniPCI Adapter board	8
Table 3: x4 PCI Express Host board connectors	9
Table 4: MiniPCI Adapter board connectors	9

1 About this Document

1.1 Purpose

This document describes Hardware installation, features, specification and operation for AMFELTEC Flexible x4 PCI Express to 4 MiniPCI Splitter.

1.2 Feedback

AMFELTEC Corp. makes every effort to ensure that the information contained in this document is accurate and complete at time of release. Please contact AMFELTEC Corp. if you find any errors, inconsistency or have trouble understanding any part of this document.

To provide your feedback, please send an email to support@amfeltec.com

Your comments or corrections are greatly valued in our effort for excellence and continued improvement.


1.3 Revision History

Rev. No.	Description	Rev. Date
1.0	Initial Release.	September 10, 2011

2 General Description

2.1 Introduction

Flexible x4 PCI Express to 4 MiniPCI Splitter (Splitter) is designed to extend motherboard PCI Express bus. Splitter allows connecting three standard 124-pin MiniPCI add-in boards to the motherboard PCI Express connector.

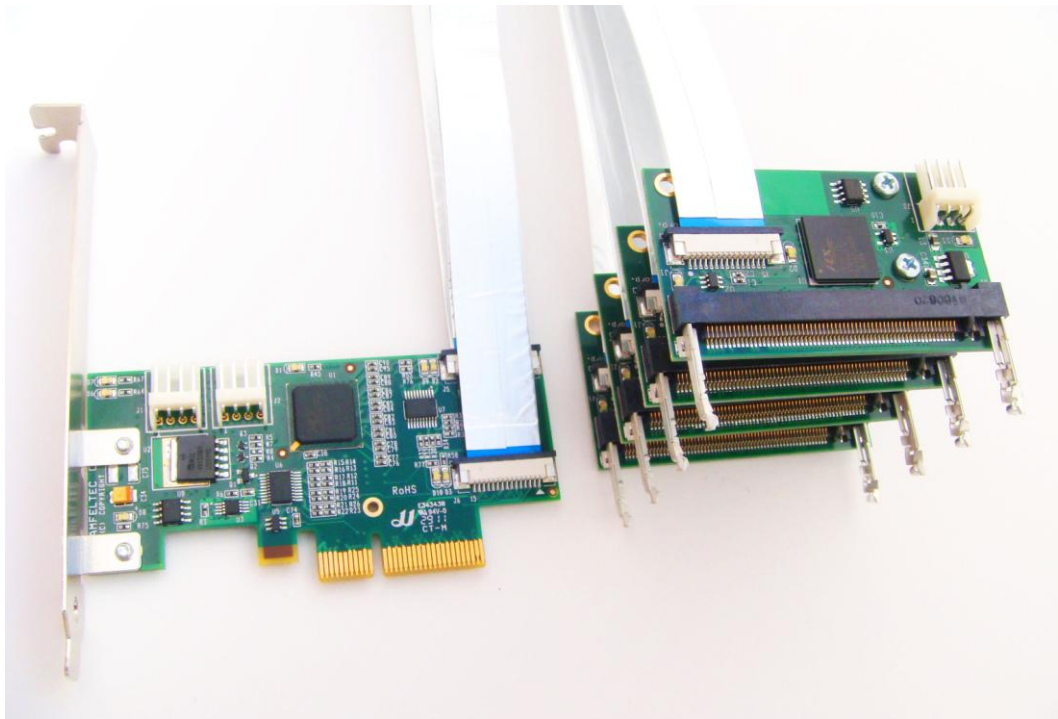

It includes x4 PCI Express Host board (Figure 1, 2) and three MiniPCI Adapter boards (Figure 3). The x4 PCI Express Host board has to be plugged into the motherboard PCI Express connector. Each of three MiniPCI Adapter boards connecting to the PCI Express Host board via four 12" Flat PCI Express cables. The expansion MiniPCI add-in boards have to be plugged into the standard 124-pin MiniPCI connectors placed on each MiniPCI Adapter board.

Because of the flexible nature of the connection, expansion MiniPCI add-in boards can be positioned away from the PCI Express Host board, including around any obstacles inside a computer chassis. MiniPCI Adapter board has three mounting holes allowing them to be securely fixed inside a computer chassis.



Figure 1: x4 PCI Express Host board (top side)



Figure 2: x4 PCI Express Host board (back side)

The Splitter functions right out of the box, no additional software needs to be installed. The x4 PCI Express Host board has LEDs for displaying Link status between PCI Express Host card and MiniPCI Adapter boards as well as MiniPCI Adapter boards “PRESENT” and “RESET” status.

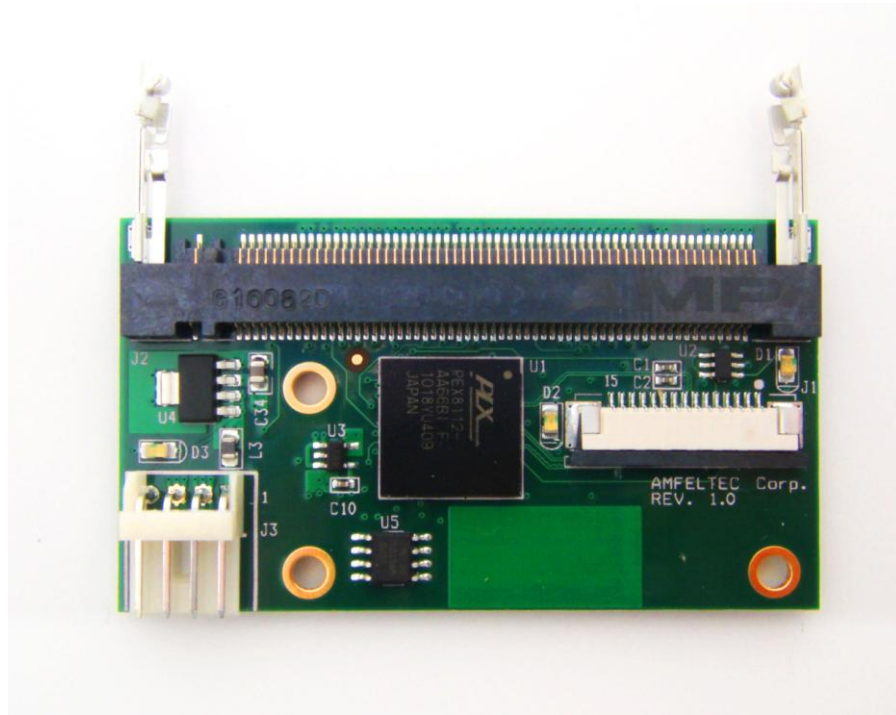


Figure 3: MiniPCI Adapter board

3 Requirements/Features

3.1 Power Source

The power for the expansion MiniPCI add-in boards is supplied from standard ATX power supply (“floppy disk” power connector (5V)) via MiniPCI Adapter board.

3.2 Software

There is no additional software needs for the x4 PCI Express to 4 MiniPCI Splitter.

4 Hardware Description

4.1 Board Layout

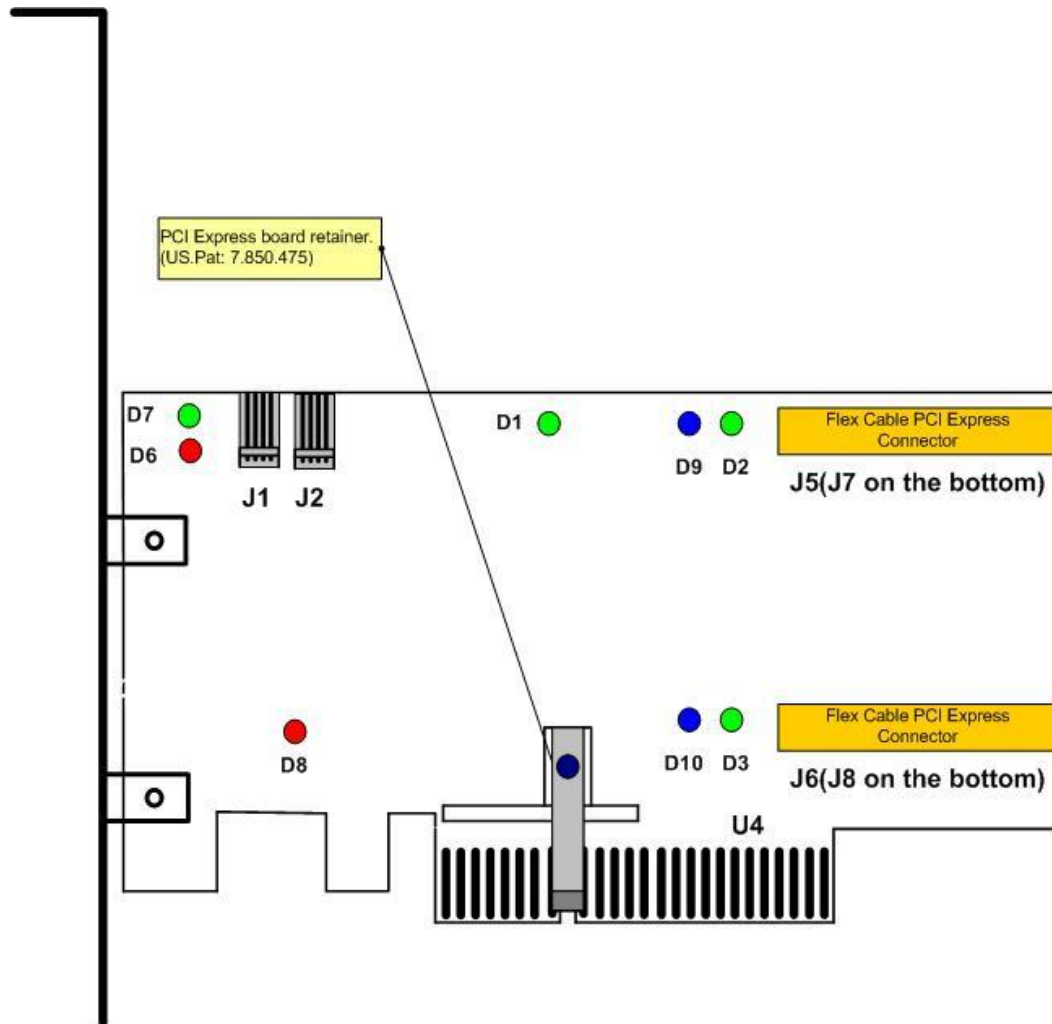


Figure 4: x4 PCI Express Host board layout (top side)

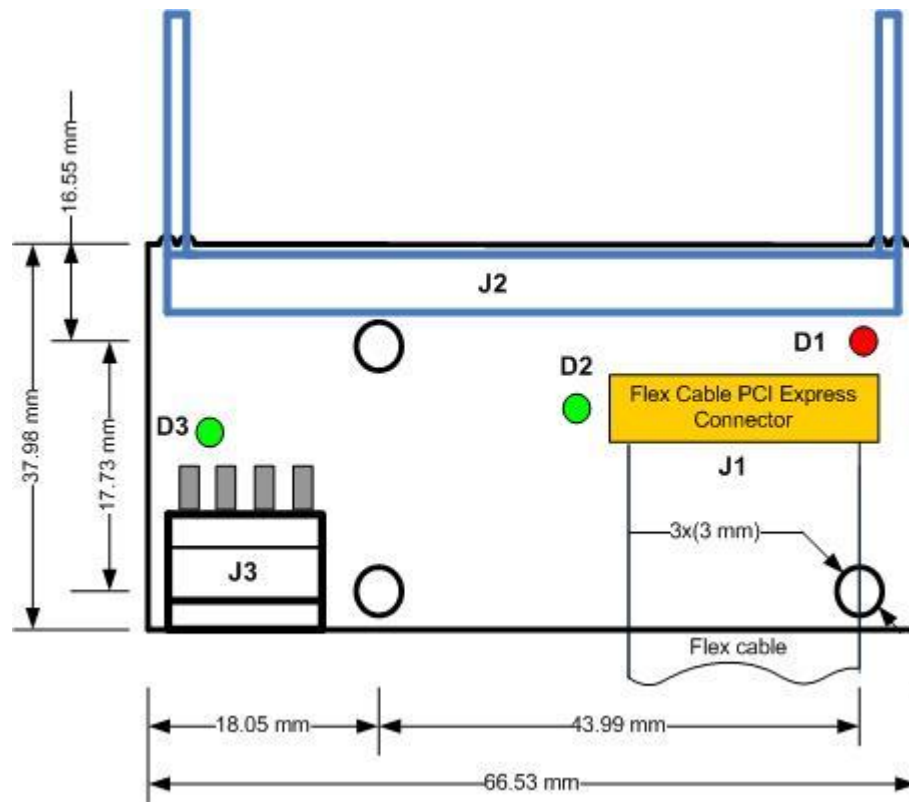


Figure 5: MiniPCI Adapter board

4.2 LEDs

Name	RefDes	Color	Usage
Link 1 UP	D1	Green	Upstream Link status
Link 2 UP	D2	Green	First downstream link status
Link 3 UP	D3	Green	Second downstream link status
Link 4 UP	D4	Green	Third downstream link status (bottom side)
Link 5 UP	D5	Green	Fours downstream link status (bottom side)
	D6	Red	Switch status
	D7	Green	Switch status
RESET	D8	Red	Upstream PCI express reset signal
PRSNT 2	D9	Blue	First link “PRSNT” signal
PRSNT 3	D10	Blue	Second link “PRSNT” signal
PRSNT 4	D11	Blue	Third link “PRSNT” signal
PRSNT 5	D12	Blue	Fours link “PRSNT” signal

Table 1: LEDs on the x4 PCI Express Host board

Name	RefDes	Color	Usage
Link Status	D2	Green	PCI Express Link status between motherboard and MiniPCI adapter board
RESET	D1	Red	PCI Express reset signal status
Power	D3	Green	Power status on the MiniPCI adapter board

Table 2: LEDs on the MiniPCI Adapter board

4.3 Connectors

RefDes	Type	Usage
U4	Upstream x4 PCI Express male connector	Connection to the upstream PCI Express bus on motherboard
J1,J2	“Floppy disk” male power connectors	Supply power for the expansion add-in PCI Express boards
J5,J6,J7 J8	PCI Express Flex Cable connector	Connector via Flex PCI Express Cable to the x1 PCI Express Adapter boards.

Table 3: x4 PCI Express Host board connectors

RefDes	Type	Usage
J1	PCI Express Flex Cable connector	Connector via Flex PCI Express Cable to the MiniPCI Express Host board.
J3	“Floppy disk” male power connectors	Incoming 5V power from the standard ATX power supply or any external power supply.
J2	Downstream 124-pin standard MiniPCI female connector	Connection to the expansion MiniPCI add-in board.

Table 4: MiniPCI Adapter board connectors

5 Installation

5.1 Hardware

Following steps provide the exact sequence need to be followed in order to properly install the Flexible x4 PCI Express to 4 MiniPCI Splitter from AMFELTEC Corp.:

- Turn OFF host computer before installation.
- Remove the chassis cover from host computer.
- Insert Flat PCI Express Cables to the connectors on the PCI Express Host board and on the MiniPCI Adapter boards.
- Install the Host board into the motherboard PCI Express slot. Place and retain MiniPCI Adapter boards inside the chassis. Connect power for the MiniPCI adapter boards.
- Plug-in expansion add-in boards into MiniPCI Adapter boards.

Now, you can power-up the host computer.



BE SURE THAT TWO LEDS: D1 (GREEN) IS ON and D8 (RED) IS OFF!
(Upstream Link status and PCI Express RESET signal).



BE SURE THAT GREEN LEDS ARE ON where BLUE LEDS ARE ON!
(Downstream Link connected where expansion PCI Express board is presented)

5.2 Software

Flexible x4 PCI to 4 MiniPCI Splitter doesn't require any software/device driver for normal operation.

6 Operation Modes

7 Ordering Information

7.1 Standard package

Standard package include the following components:

- x4 PCI Express Host Board
- Four MiniPCI Adapter boards with Flat PCI Express cables
- User manual

8 Appendix A: Limited warranty

AMFELTEC Corporation does not warrant that the operation of the hardware, software or firmware products will be uninterrupted or error free. AMFELTEC products are not intended to be used as critical components in life support systems, aircraft, military systems or other systems whose failure to perform can reasonably be expected to cause significant injury to humans. AMFELTEC expressly disclaims liability for loss of profits and other consequential damages caused by the failure of any product which would cause interruption of work or loss of profits, such as shipboard or military attachment.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. THE WARRANTIES PROVIDED HEREIN ARE BUYER'S SOLE REMEDIES. IN NO EVENT SHALL AMFELTEC CORPORATION BE LIABLE FOR DIRECT, SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES SUFFERED OR INCURRED AS A RESULT OF THE USE OF, OR INABILITY TO USE THESE PRODUCTS. THIS LIMITATION OF LIABILITY REMAINS IN FORCE EVEN IF AMFELTEC CORPORATION IS INFORMED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the exclusion or limitation on incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.