Squid PCI Express Carrier Board™ for M.2 SSD modules

Hardware Manual

June 22, 2015 Revision 1.0

Contents

1	About this Document		
	1.1	Purpose	1
	1.2	Feedback	1
	1.3	Revision History	1
2	Genera	al Description	2
	2.1	Introduction	2
	2.2	Package Contents	2
3	Featur	es	6
	3.1	Features	6
	3.2	PCI Express Carrier board for M.2 SSD modules interfaces connection.	6
4	Installa	ation	7
	4.1	Carrier board installation	7
5	Hardw	are Description	8
	5.1	Board Layout	8
	5.2	LEDs	9
	5.3	Connectors	9
6	Appen	dix A:	10
7	Appen	dix B: Limited warranty	11
Figu	ures		
		I Express Carrier Board for M.2 SSD modules (top)	
Figure Figure	3: PC 4: Ca	I Express Carrier Board for M.2 SSD modules (bottom). I Express Carrier Board for M.2 SSD modules (top) with x4,x8 and x16 PCIe Adapters Trier board PCI Express connection. I Express Carrier Board for M.2 modules layout	5 6

Tables

Table 1: PCI Express Carrier Board for M.2 modules LEDs	9
Table 2: PCI Express Carrier Board for M.2 modules connectors	9

1 About this Document

1.1 Purpose

This document describes hardware installation, features, specification and operation of the *Squid* PCI Express Carrier BoardTM for M.2 SSD modules from AMFELTEC Corporation.

1.2 Feedback

AMFELTEC Corp- makes every effort to ensure that the information contained in this document is accurate and complete at time of release. Please contact AMFELTEC Corp- if you find any errors, inconsistence or have trouble understanding any part of this document.

To provide your feedback, please send an email to support@amfeltec.com

Your comments or corrections are greatly valued in our effort for excellence and continued improvement.

1.3 Revision History

Rev. No.	Description	Rev. Date
1.0	Initial Release.	June 22, 2015

2 General Description

2.1 Introduction

Squid PCI Express family is a series of PCI Express Carrier Boards designed for expansion of any desktop computer or embedded appliance. *Squid* family expands a motherboard's PCI Express or USB slot with multiple full/half size MiniPCI Express or M.2 modules.

PCI Express Carrier Board for M.2 SSD modules occupies the space equal to standard one-slot wide PCI Express board defined by PCI Express Specification. Carrier board is half height/half length PCI Express board. It is located in the middle of the PCI Express slot and connects to the motherboard PCI Express connector via exchangeable x4 or x8 or x16 PCI Express adapters. This unique PCI Express structure (patent pending) allows allocating up to 4 M.2 modules on the top and bottom sides of the carrier board, and not violating PCI Express Specification.

M.2 (M key) circuits located on the Carrier board support any M.2 PCI Express M key modules with any standard length (2230/2242/2260/2280 and 22110).

2.2 Package Contents

PCI Express Carrier Board for M.2 SSD modules package (depending on the SKU part number) includes the following parts:

- 1. PCI Express Carrier Board for M.2 modules (Figure 1, Figure 2)
- 2. x4 or x8 or x16 PCI Express Adapters (Figure 2)
- 3. Full or half size PCI Express bracket



Figure 1: PCI Express Carrier Board for M.2 SSD modules (top)



Figure 2: PCI Express Carrier Board for M.2 SSD modules (bottom).

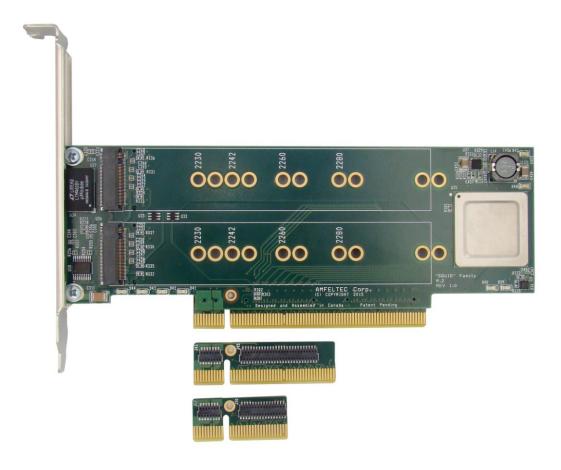



Figure 3: PCI Express Carrier Board for M.2 SSD modules (top) with x4,x8 and x16 PCIe Adapters

3 Features

3.1 Features

- Easy 'Plug and Play" installation
- Supports up to 4 M.2 PCI Express add-in modules (M key)
- x4 PCI Express (Gen2) connection to each M.2 circuit
- Half-length / half-height PCI Express board; x4 or x8 or x16 upstream PCI Express (Gen 2) connection
- Supports PCI Express Gen 2 (5.0 Gbps) interface
- Meets PCI Express 2.1 and M.2 1.0 Specifications
- RoHS compliant

3.2 PCI Express Carrier board for M.2 SSD modules interfaces connection.

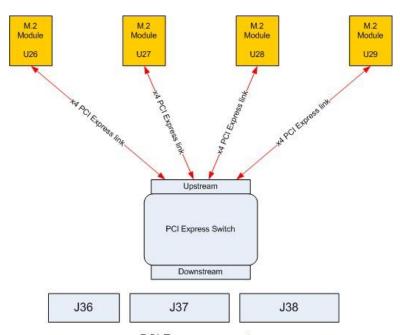

PCI Express connector

Figure 4: Carrier board PCI Express connection.

4 Installation

4.1 Carrier board installation

Following steps provide the exact sequence that needs to be followed in order to properly install the Amfeltec PCI Express Expansion Carrier Board:

- Turn OFF computer before installation
- Remove the chassis cover from the computer
- Locate an unused PCI express slot and remove the corresponding slot cover from computer chassis
- Plug-in Carrier Board to PCI express slot and attach its bracket to the computer chassis with a screw
- Put the chassis cover back on the computer
- Turn ON computer

5 Hardware Description

5.1 Board Layout

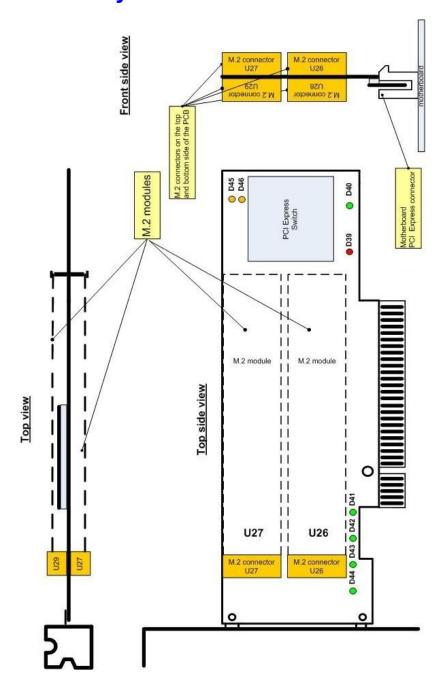


Figure 5: PCI Express Carrier Board for M.2 modules layout

5.2 LEDs

Name	Ref. Des.	Color	Usage
RESET	D39	RED	Global PCI Express RESET signal from motherboard
UPSTREAM	D40	GREEN	Upstream PCI Express Link status.
STATUS	D45,D46	YELLOW	PCIe Switch status.
LINK1	D41	GREEN	Status of the downstream x4 PCIe Link to U26
LINK2	D42	GREEN	Status of the downstream x4 PCIe Link to U28
LINK3	D43	GREEN	Status of the downstream x4 PCIe Link to U27
LINK4	D44	GREEN	Status of the downstream x4 PCIe Link to U29

Table 1: PCI Express Carrier Board for M.2 modules LEDs

5.3 Connectors

Ref. Des.	Type	Usage
J36, J37, J38	connectors	Connection to the x4 or x8 or x16 PCI Express Adapter
U26,U27	M.2 connectors (M key)	M.2 add-in modules connections (top side)
U28,U29		M.2 add-in modules connections (bottom side)

Table 2: PCI Express Carrier Board for M.2 modules connectors

6 Appendix A:

7 Appendix B: Limited warranty

AMFELTEC Corporation does not warrant that the operation of the hardware, software or firmware products will be uninterrupted or error free. AMFELTEC products are not intended to be used as critical components in life support systems, aircraft, military systems or other systems whose failure to perform can reasonably be expected to cause significant injury to humans. AMFELTEC expressly disclaims liability for loss of profits and other consequential damages caused by the failure of any product which would cause interruption of work or loss of profits, such as shipboard or military attachment.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. THE WARRANTIES PROVIDED HEREIN ARE BUYER'S SOLE REMEDIES. IN NO EVENT SHALL AMFELTEC CORPORATION BE LIABLE FOR DIRECT, SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES SUFFERED OR INCURRED AS A RESULT OF THE USE OF, OR INABILITY TO USE THESE PRODUCTS. THIS LIMITATION OF LIABILITY REMAINS IN FORCE EVEN IF AMFELTEC CORPORATION IS INFORMED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the exclusion or limitation on incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.